



INSTRUCTION SHEET (I)

2000-Current F-150
1999-2002 F-250/350




NOTE: ALL DRIVERS SIDE SEAT COVERS CONTAIN A WET OKOLE TAG SEWN ON THE OUTBOARD SIDE FACING THE DOOR OF BOTH THE BACK REST AND SEAT BOTTOM COVERS.

As we are unable to assist you on installing your Wet Okole Hi. Waterproof sport seat covers we offer these special instructions. This particular instruction is a universal instruction for the Ford F-150/250/350 rear bench. Mostly all other vehicles are self explanatory. Any problems please feel free to call for technical support at 1(888)24-Okole. Enjoy your Wet Okole Hawaii Seat Covers!

1997-98

Before installing your Wet Okole seat covers the backrest must be detached from the back of the cab. First step is to fold bottom seats forward and install seat bottom covers and attach covers.

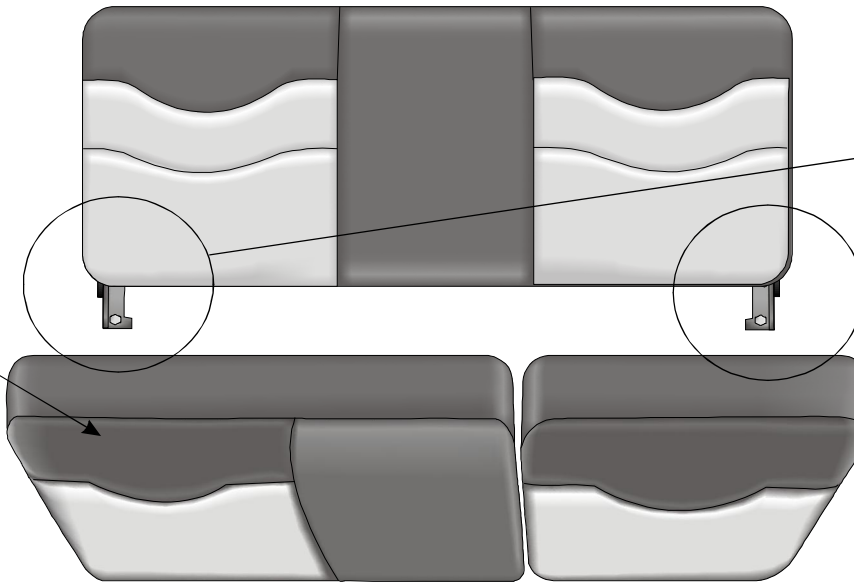


Pattern # 9650

Next you will need a 10mm size socket with extension and ratchet and remove the (2) 10mm bolts at the base of the backrest (1) located at each outboard side of the backrest. Once the (2) 10mm are removed lift the backrest off the rear cab and install seat cover. Once the seat cover is installed reverse process.

2000-03

First fold seat bottoms back and install seat covers. Next you will need to remove the backrest by pushing firmly at the bottom of the backrest with your knee and at the top with your hand. Once back rest is released lift it straight up and of the rear of the cab and install seat cover. (Refer to illustration.)

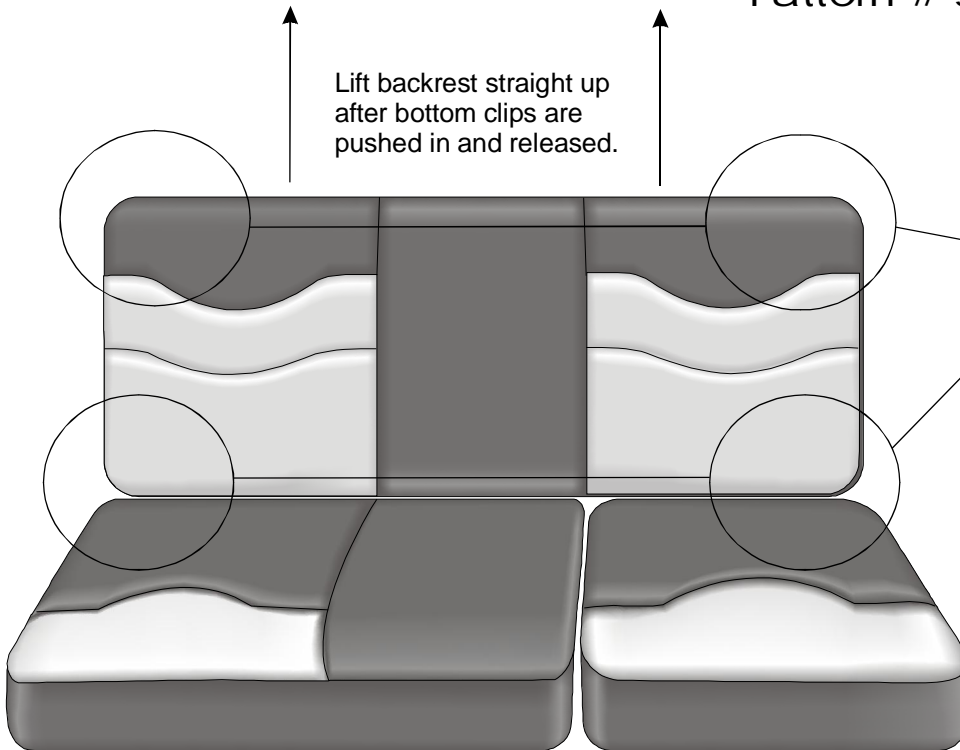

Pattern #'s 0006, 0025

Lift backrest straight up after bottom clips are pushed in and released.

Push backrest in from here using your knee for the bottom and your hand on the top and lift backrest straight up to remove.

INSTALLATION QUESTIONS

TECHNICAL ASSISTANT *HOT-LINE* CALL TOLL FREE 1(888) 24-OKOLE
MONDAY-SATURDAY 8:00 A.M.-4:30 P.M. PACIFIC TIME.