



INSTRUCTION SHEET (2)





2005-Mini Cooper Convertible Rear Bench Installation

Dear Customer,


As we are unable to assist you on installing your Wet Okole Hi. Waterproof sport seat covers we offer these special instructions. This particular instruction is for the Mini Cooper. Mostly all other vehicles are self explanatory. Any problems please feel free to call for technical support at 1(888)24-Okole. Enjoy your Wet Okole Hawaii Seat Covers!

NOTE: ALL DRIVERS SIDE SEAT COVERS CONTAIN A WET OKOLE TAG SEWN ON THE OUTBOARD SIDE FACING THE DOOR OF BOTH THE BACK REST AND SEAT BOTTOM COVERS.

Please refer to the illustration below to see the steps you must take to install your Wet Okole Seat-covers. Step 1 Pull up from the front of the bottom seat cushion. Step 2 Pull bottom cushion forward and reverse these steps after your seat-cover is installed..

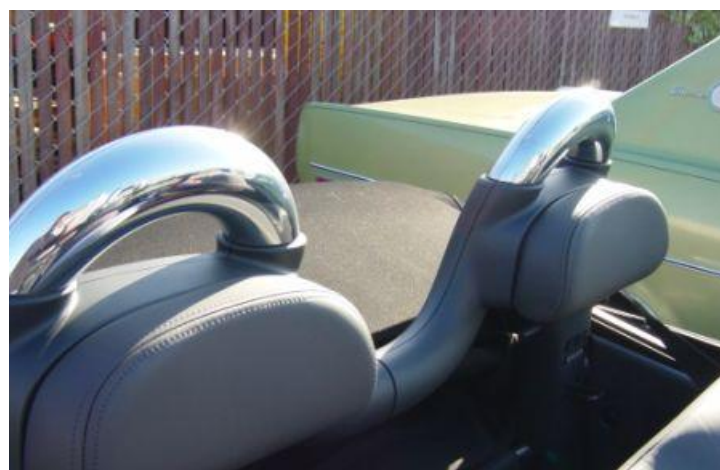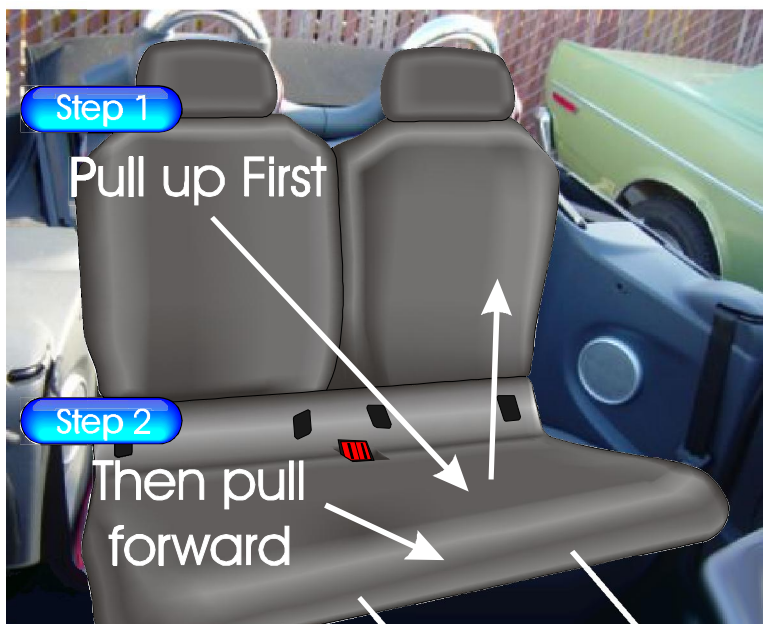

To remove headrest remove plastic cap here, and then remove Torx screw.

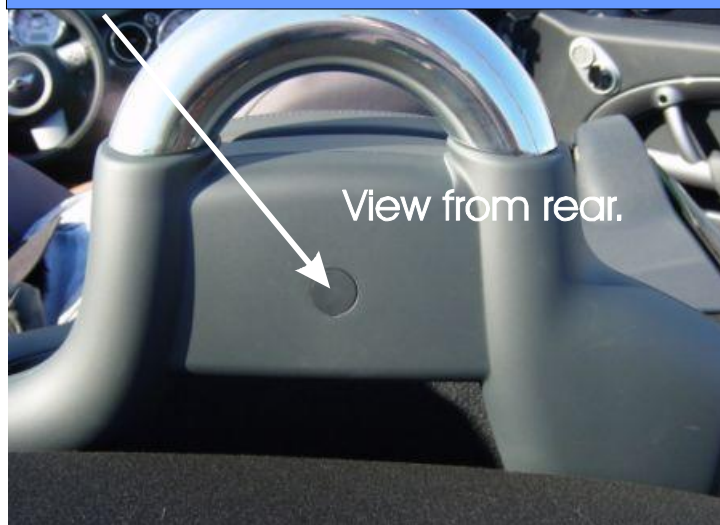

Before seat cover can be installed on your rear bench seat you need to remove the bottom seat cushion in your mini.



INSTALLATION QUESTIONS

TECHNICAL ASSISTANT *HOT-LINE* CALL TOLL FREE 1(888) 24-OKOLE
MONDAY-SATURDAY 8:00 A.M.-4:30 P.M. PACIFIC TIME.