

INSTRUCTION SHEET (y)

Dear Customer,


2005-current PT Cruiser Convertible

As we are unable to assist you on installing your Wet Okole Hi. Waterproof sport seat covers we offer these special instructions. This particular instruction is a universal instruction for the PT Cruiser convertible rear bench. Mostly all other vehicles are self explanatory. Any problems please feel free to call for technical support at 1(888)24-Okole. Enjoy your Wet Okole Hawaii Seat Covers!

Note: DO NOT REMOVE HEADREST
(Headrest is non-removable.)

Step 1a

Remove plastic upholstery clips from back of headrest with a long standard screw driver or small pry bar tool.

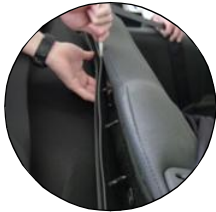

Step 1b

Apply headrest cover and cut holes just large enough for plastic clips to slip through.




Step 1c

After all plastic clips are re-installed the back of the headrest cover should look as shown.



Note: DO NOT REMOVE HEADREST
(Headrest is non-removable.)

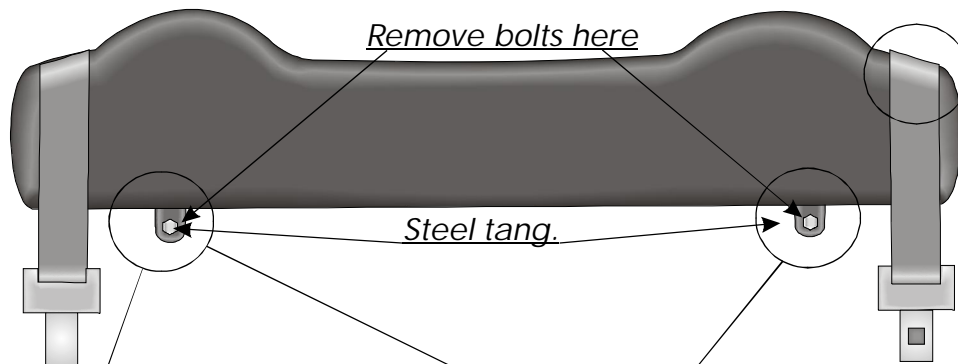

Step 2a

Use appropriate size socket to loosen bolt and remove.



Step 2b

Cut slot in cover to slip cover over tang.



Step 3

Tuck cover under seat belt plastic.



INSTALLATION QUESTIONS

TECHNICAL ASSISTANT HOT-LINE CALL TOLL FREE 1(888) 24-OKOLE
MONDAY-SATURDAY 8:00 A.M.-4:30 P.M. PACIFIC TIME.