


INSTRUCTION SHEET (S)

Dear Customer 1998-2002 Ram/Laramie SLT (9813) & (9662) Caravan

As we are unable to assist you on installing your Wet Okole Hi. Water proof seat cover we offer these special instructions for each individual vehicle. On your particular truck the plastic frame cover has to come off, along with the Seat Belt Stationary Mount Nut. Remove the 3 screws from the Plastic Frame Cover as Pictured in Figure A. Remove the plastic frame cover from away and off of the frame. Remove the seat belt stationary mount bolt as pictured in figure B. Remove the seat belt stationary end off of the bolt. Slip the rest part of the seat cover over the top of the rest and put the seat belt stationary end through the hole that is pre-sewn in the seat cover for seat belt. Attach the velcro, front to rear of rest. Repeat Procedure on the other side. Re-assemble once your seat covers are installed. Any problems please feel free to call for technical support. Enjoy your Wet Okole Hawaii Seat Covers!

Step 1


Remove handle on back of backrest by prying cover open with a small flat screw driver then remove screw with a phillips screw driver.

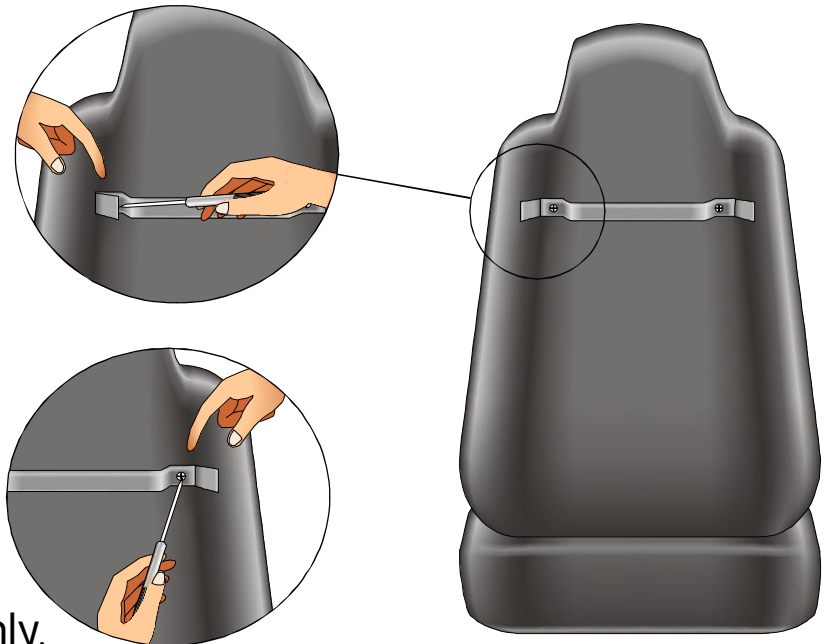


NOTE:
pattern 9662
for Caravan refer to step 1 only.

Step 2

To remove seat belt you must first remove 3 phillips screws from plastic molding and remove plastic. 1st screw is located at the front of plastic one on very back upper plastic and the third is located underneath lever.

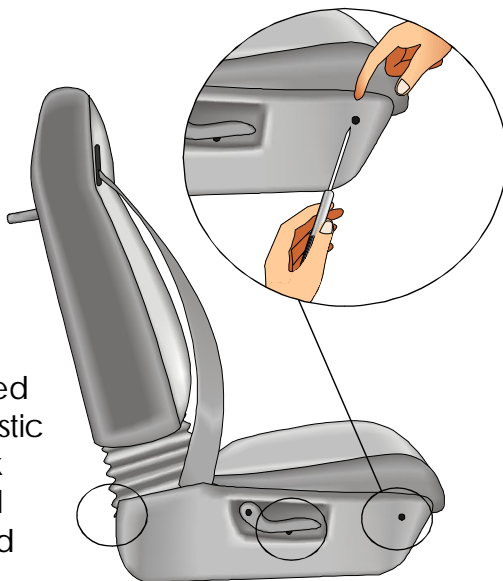

Step 3

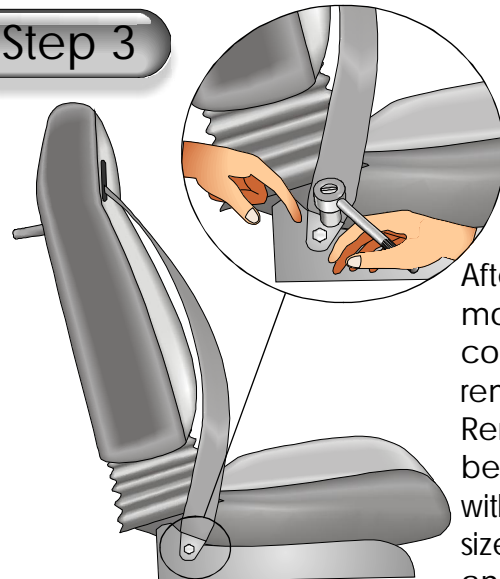

After plastic molding is completely removed. Remove seat belt anchor with appropriate size ratchet and socket.

INSTALLATION QUESTIONS

TECHNICAL ASSISTANT HOT-LINE CALL TOLL FREE 1(888) 24-OKOLE
MONDAY-SATURDAY 8:00 A.M.-4:30 P.M. PACIFIC TIME.