

INSTRUCTION SHEET (Y)


2001- Current

Chevrolet Suburban/Silverado
Cadillac Escalade, GMC Yukon
Instruction Sheet




Dear Customer,

As we are unable to assist you on installing your Wet Okole Hi. Waterproof sport seat covers we offer these special instructions. This particular instruction is a universal instruction for Chevy Suburban, Tahoe, GMC Yukon, Cadillac Escalade. Mostly all other vehicles are self explanatory. Any problems please feel free to call for technical support at 1(888)24-Okole. Enjoy your Wet Okole Hawaii Seat Covers!

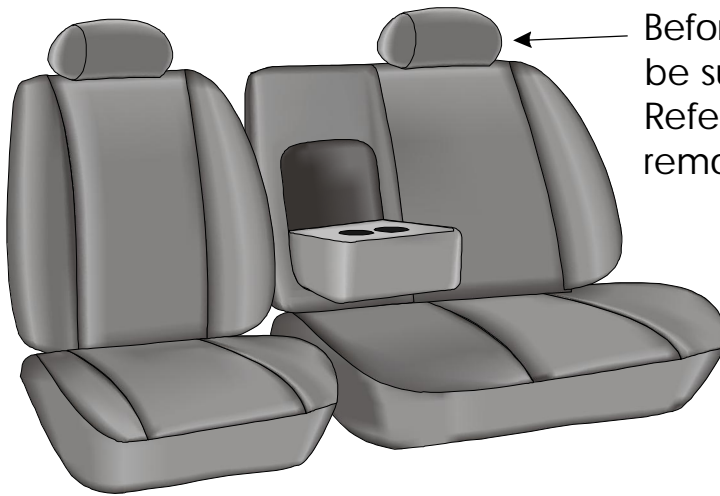


Before you install your seat covers be sure that both headrest are removed. Refer to Instruction sheet C for headrest removal.

Next, fold seat forward and install seat bottom covers. After bottom seat covers is installed fold shelf located on rear of the backrest up against the back of the backrest.

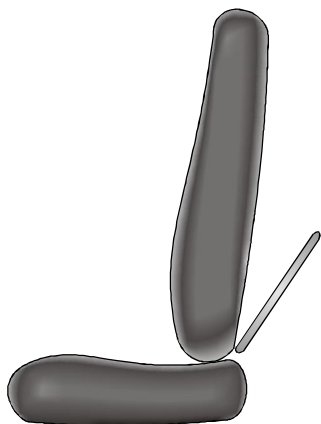

Shelf must go up against back of seat to put on seat cover

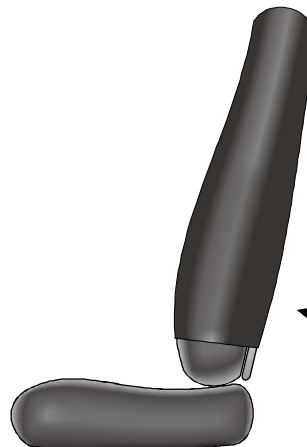

While holding shelf up in place pull seat-cover over backrest and attach velcro together.

INSTALLATION QUESTIONS

TECHNICAL ASSISTANT HOT-LINE CALL TOLL FREE 1(888) 24-OKOLE
MONDAY-SATURDAY 8:00 A.M.-4:30 P.M. PACIFIC TIME.