



# INSTRUCTION SHEET (p)

## Toyota Tacoma-Solid;40/60 Rear Bench



Dear Customer,



As we are unable to assist you on installing your Wet Okole Hi. Waterproof sport seat covers we offer these special instructions. This particular instruction is a universal instruction for Toyota Tacoma rear bench. Mostly all other vehicles are self explanatory. Any problems please feel free to call for technical support at 1(888)24-Okole. Enjoy your Wet Okole Hawaii Seat Covers!

### Step 1


Before installing your Wet Okole Hawaii Seat Covers refer to instruction sheet C on headrest removal. Also remember there is a opening at the top of the backrest cover to allow access for the release strap located at both outboard sides next to both headrest.

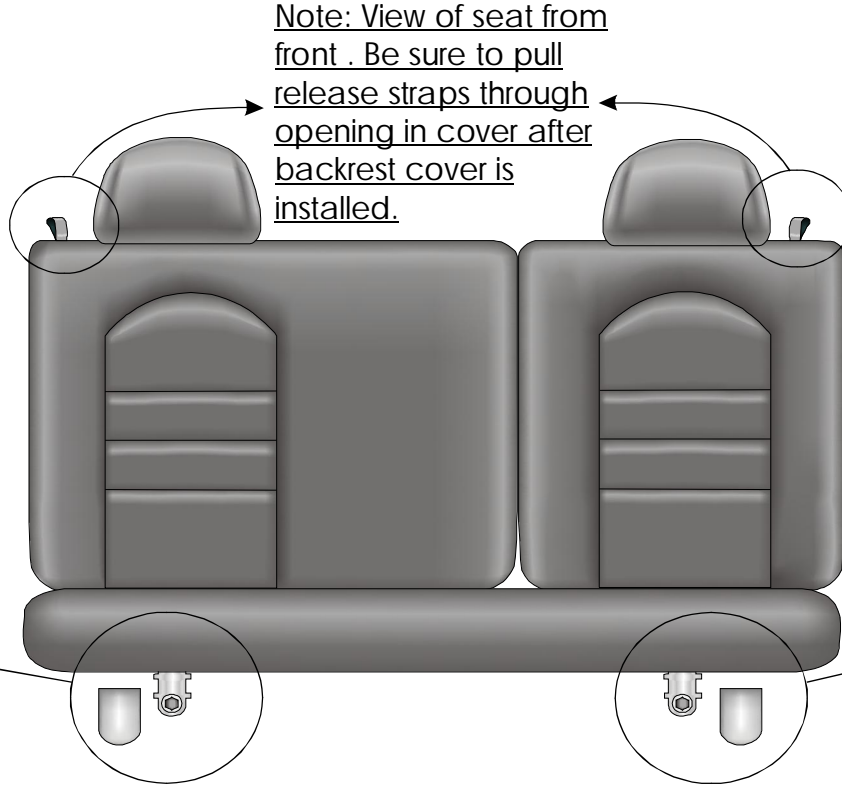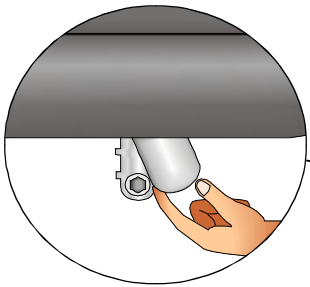

Note: View of seat from front . Be sure to pull release straps through opening in cover after backrest cover is installed.



### Step 2

Next, you will need to remove 6 anchor bolts located at the base of the seat bottom cushion. First, remove the plastic covers located at both front ends of seat. *(Refer to illustration.)*Liftup plastic by hand, plastic will pop off with a little force. Next remove the bolt with an appropriate size socket and ratchet.

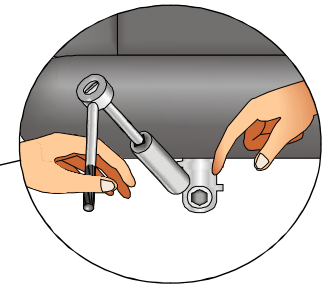

### Step 3

Fold both backrest forward and locate the four bolts located underneath the carpet. The carpet is cut-out and attaches with velcro to allow access to bolts. Use the appropriate size socket, extension, and ratchet.

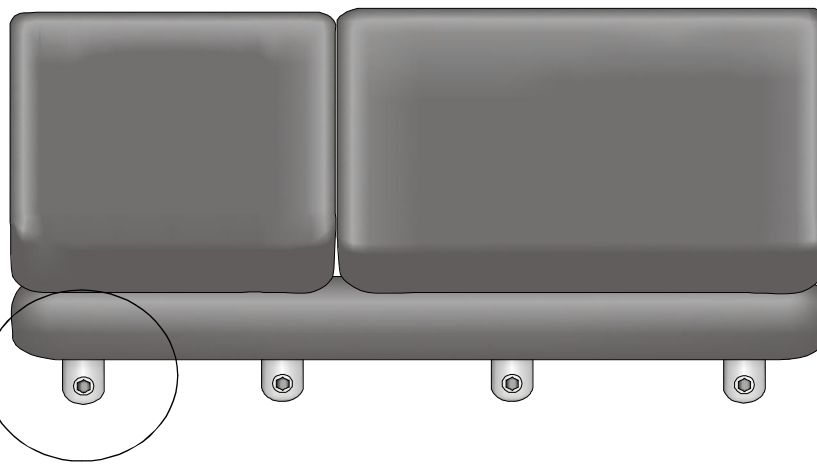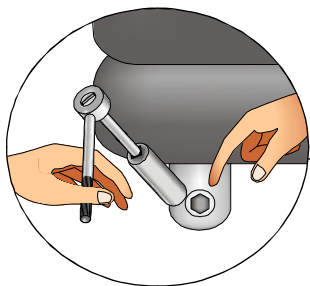

Note: View of seat from rear . Backrest must be in folded down position the gain access to rear anchor bolts.

Note : Rear bench may need to be removed from vehicle to allow easy seat cover installation.

MADE IN USA

by WET OKOLE HAWAII

## INSTALLATION QUESTIONS

TECHNICAL ASSISTANT HOT-LINE CALL TOLL FREE 1(888) 24-OKOLE  
MONDAY-SATURDAY 8:00 A.M.-4:30 P.M. PACIFIC TIME.