


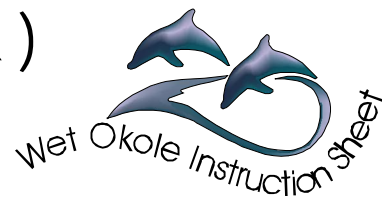

INSTRUCTION SHEET (k)

1981-1989 Toyota Landcruiser Rear Bench




Dear Customer,

As we are unable to assist you on installing your Wet Okole Hi. Waterproof sport seat covers we offer these special instructions. This particular instruction is a universal instruction for Toyota Landcruiser rear bench. Mostly all other vehicles are self explanatory. Any problems please feel free to call for technical support at 1(888)24-Okole. Enjoy your Wet Okole Hawaii Seat Covers!


Step 1

Fold seat cushion forward by pulling release strap at center rear of seat cushion.

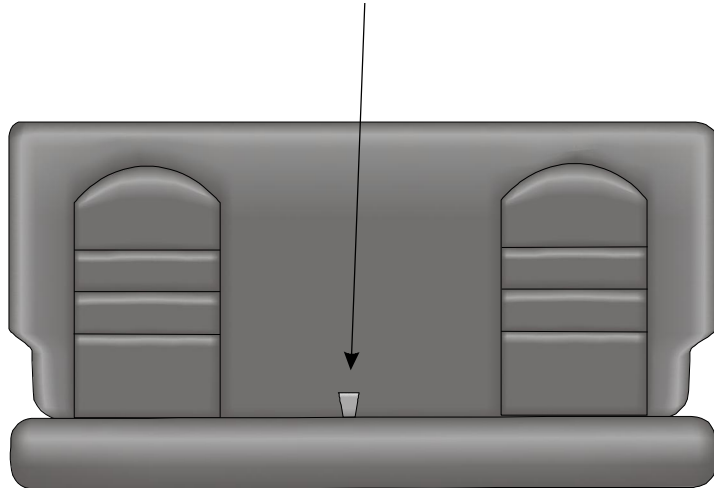

Step 2




Once seat is folded up install seat bottom seat covers and secure all straps.

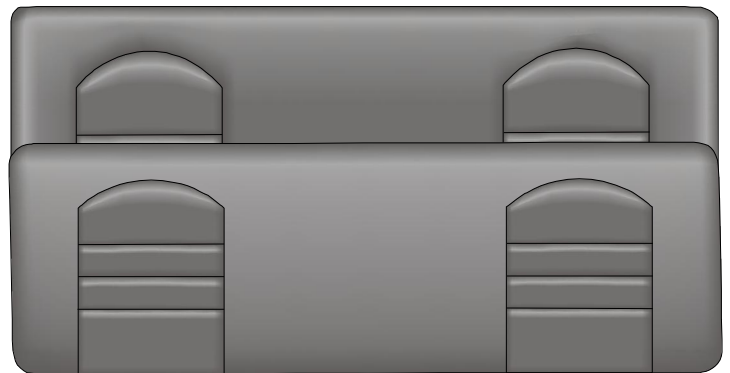

Step 3

Remove carpet molding on back of back rest with a #2 size phillips screwdriver. There are (3) moldings total 1 large piece in the center and 2 small pieces at the bottom of each end.


Refer to illustration.

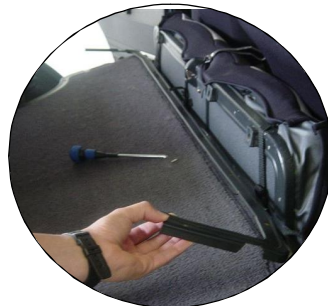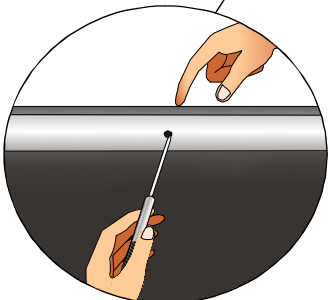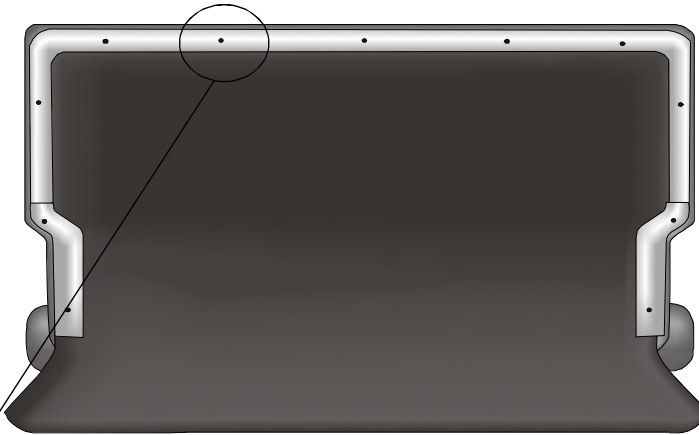

Step 4

After removing the 3 moldings from the back rest fold carpet back and install back rest seat cover. After back rest cover is installed fold the carpet back up against back rest and reinstall moldings and phillips screws.

Refer to illustration.

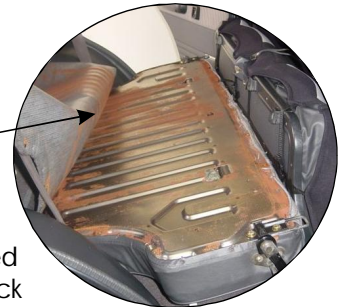

INSTALLATION QUESTIONS

TECHNICAL ASSISTANT HOT-LINE CALL TOLL FREE 1(888) 24-OKOLE
MONDAY-SATURDAY 8:00 A.M.-4:30 P.M. PACIFIC TIME.