



INSTRUCTION SHEET (1)

Dear Customer,

2005 Toyota Tundra 40/60 w/3 Headrest


As we are unable to assist you on installing your Wet Okole Hi. Waterproof sport seat covers we offer these special instructions. This particular instruction is a universal instruction for Toyota Tundra split bench. Mostly all other vehicles are self explanatory. Any problems please feel free to call for technical support at 1(888)24-Okole. Enjoy your Wet Okole Hawaii Seat Covers!

Step 1


Driver Seat.

Note : Drivers side seat cover is one piece.

When installing remove head rest first. (refer to instruction sheet (F).

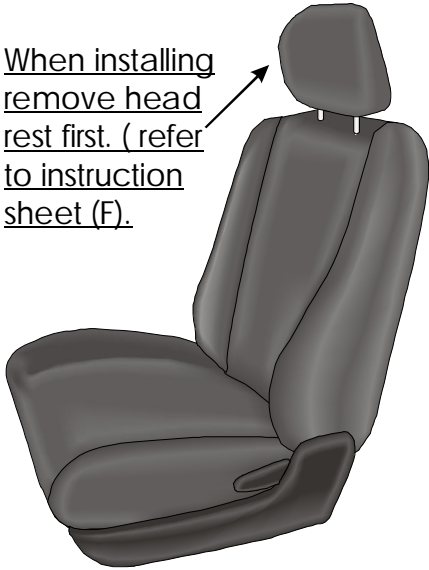

Slide buckle off and slide strap between seat and plastic.

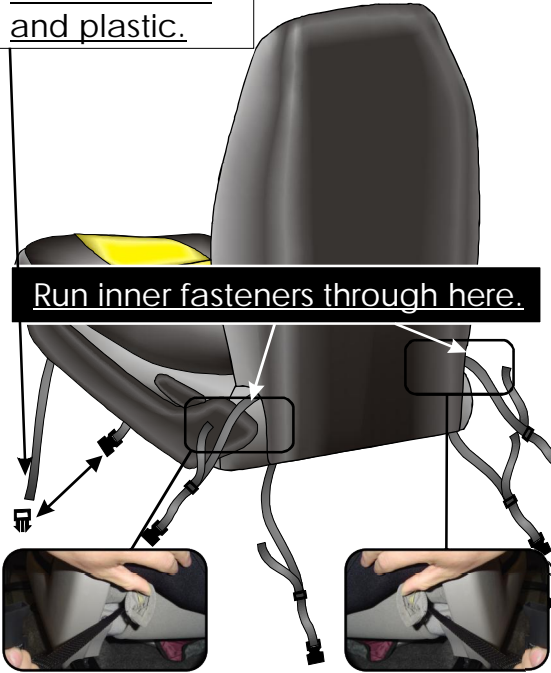

NOTE: ALL DRIVERS SIDE SEAT COVERS CONTAIN A WET OKOLE TAG SEWN ON THE OUTBOARD SIDE FACING THE DOOR OF BOTH THE BACK REST AND SEAT BOTTOM COVERS.

Step 2

Passenger Seat.



Apply backrest cover with arm-rest folded out and velcro on back of cover open to slip around seatbelt.

Apply bottom cover 1st
You will be left with 2 extra fasteners for the backrest cover.

Back of Seat.



Next, attach fastener buckles together.



INSTALLATION QUESTIONS

TECHNICAL ASSISTANT HOT-LINE CALL TOLL FREE 1(888) 24-OKOLE
MONDAY-SATURDAY 8:00 A.M.-4:30 P.M. PACIFIC TIME.