


Dear Customer,

INSTRUCTION SHEET (U)

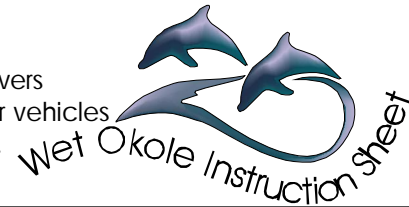


As we are unable to assist you on installing your Wet Okole Hi. Waterproof sport seat covers we offer these special instructions. This particular instruction is a universal instruction. Mostly all other vehicles are self explanatory. Any problems please feel free to call for technical support at 1(888)24-Okole. Enjoy your Wet Okole Hawaii Seat Covers!

Step 1

Install side strap by inserting it between the seat and plastic molding. (It may be necessary to remove the buckles from the strap first.)


NOTE: Plastic may need to be removed on certain vehicles. Plastic moldings are usually mounted with phillips screws.

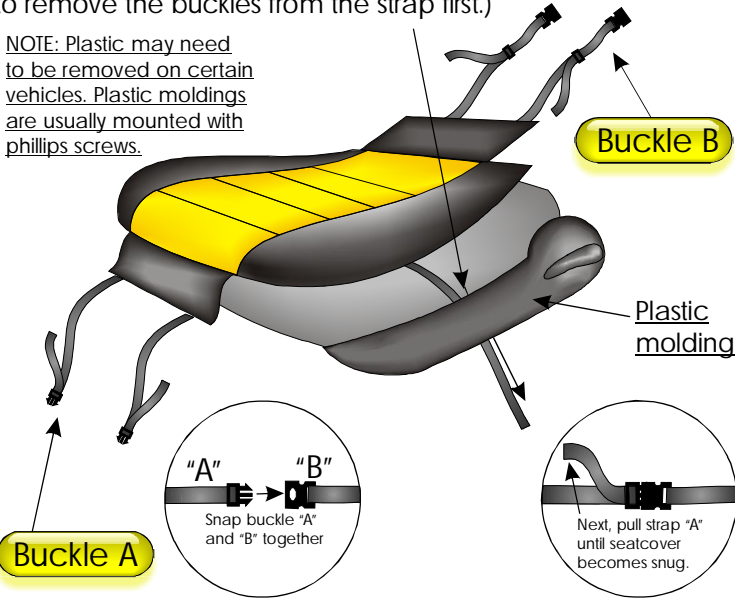

Step 2


If your vehicle has removable headrest remove them before you install your seat covers.

(Step 2) Release mechanism is located in plastic housing. Look for a small hole or button.

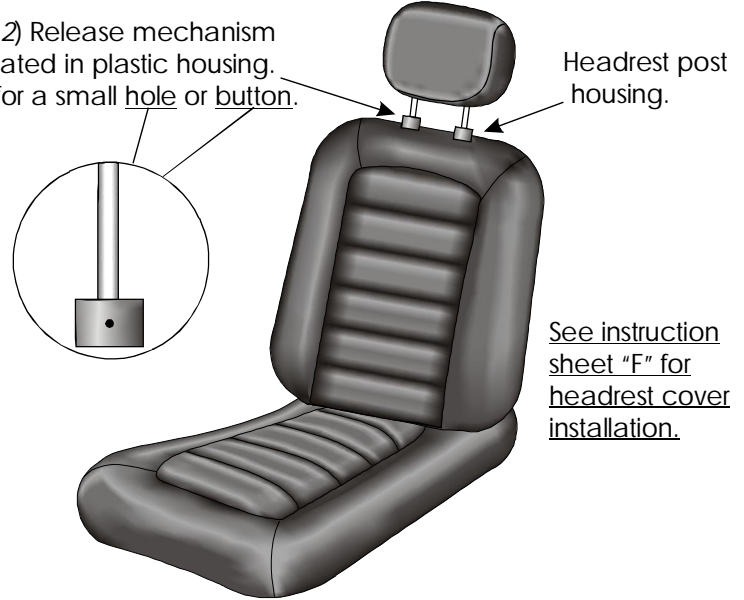


Step 3

(Step 3) Pull portion "A" down over the back rest evenly taking care not to pull too hard. Push portion "A" through bottom of back-rest (between seat-bottom and backrest gap).

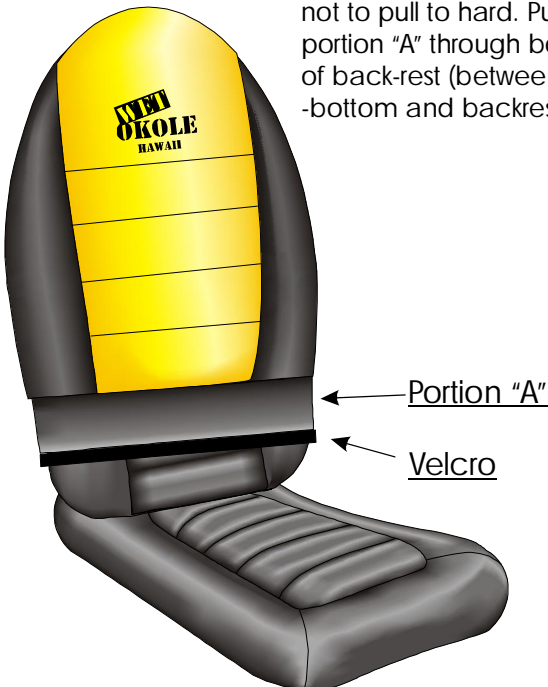

Step 4

(Step 4) After you have completed step 3 fold the backrest forward and from behind the seat attach velcro from portion "A" and "B" together

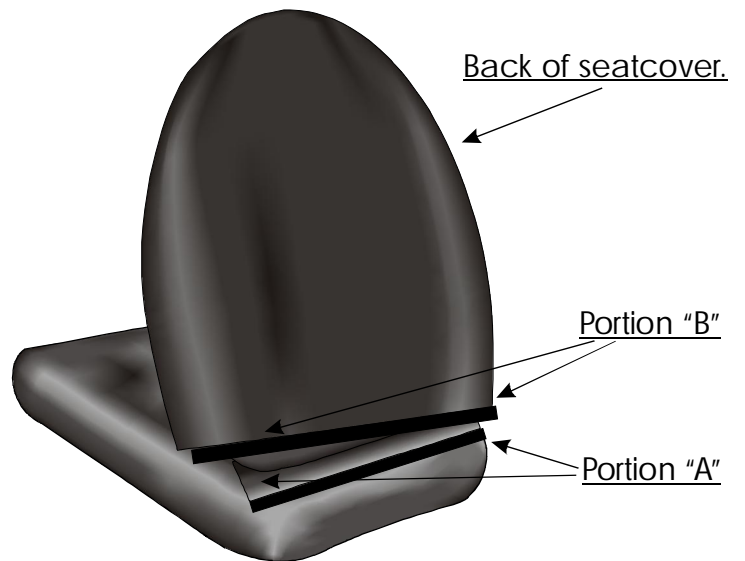

INSTALLATION QUESTIONS

TECHNICAL ASSISTANT HOT-LINE CALL TOLL FREE 1(888) 24-OKOLE
MONDAY-SATURDAY 8:00 A.M.-4:30 P.M. PACIFIC TIME.