

INSTRUCTION SHEET (i)


1995-1999
Chevrolet Suburban/Silverado/Tahoe/Yukon



Dear Customer,

As we are unable to assist you on installing your Wet Okole Hi. Waterproof sport seat covers we offer these special instructions. This particular instruction is a universal instruction for all Chevy Pick-ups, Suburban, Tahoe, and GMC Yukon. Mostly all other vehicles are self explanatory. Any problems please feel free to call for technical support at 1(888)24-Okole. Enjoy your Wet Okole Hawaii Seat Covers!

Due to the fact that Wet Okole Hawaii Seat-covers are 100% waterproof we do not recommend having electrical controls exposed to water when entering your vehicle wet. But, if you prefer having your electric controls exposed we have designed these special instructions to assist you in properly installing the electric control switch. Refer to the following illustrations and enjoy your Wet Okole Seat Covers.

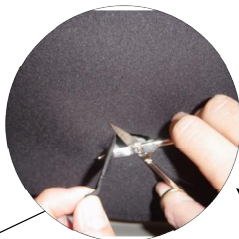

Step 1



Locate the electric control switch by feeling through the seat cover. Next, with a small manicuring scissor snip away just enough material to expose both phillips screws located at each end of electrical unit.




Step 2

Next, remove both phillips screws at each end of electrical control unit and gently pull unit through the cut out made in Step 1.



Step 3

Next, reinstall electrical control unit with seat cover material tucked firmly behind unit and reinstall phillips screws.

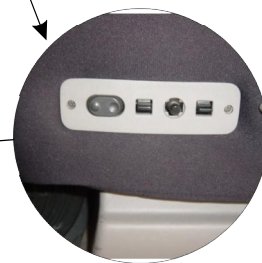

INSTALLATION QUESTIONS

TECHNICAL ASSISTANT HOT-LINE CALL TOLL FREE 1(888) 24-OKOLE
MONDAY-SATURDAY 8:00 A.M.-4:30 P.M. PACIFIC TIME.