




INSTRUCTION SHEET (e)

2002-Mini Cooper
2003-4Runner, Prius, Tundra, & Sequoia
2004-VW Toureg


Dear Customer,

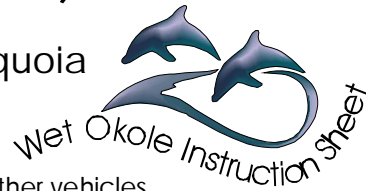

As we are unable to assist you on installing your Wet Okole Hi. Waterproof sport seat covers we offer these special instructions. This particular instruction is for the 4Runner/Mini Cooper. Mostly all other vehicles are self explanatory. Any problems please feel free to call for technical support at 1(888)24-Okole. Enjoy your Wet Okole Hawaii Seat Covers!

Step 1

Remove headrest here.

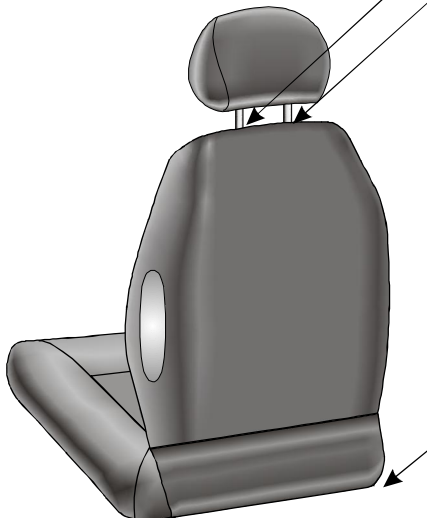

Step 1A


Before installing your back-rest cover the headrest must be removed. Refer to instruction sheet F for headrest removal instructions.

Step 1B

Next, unhook the change catcher skirt by twisting hook or cut off elastic.


Step 1C

Next, flip up the change holder skirt up against the backrest. Refer to illustration.

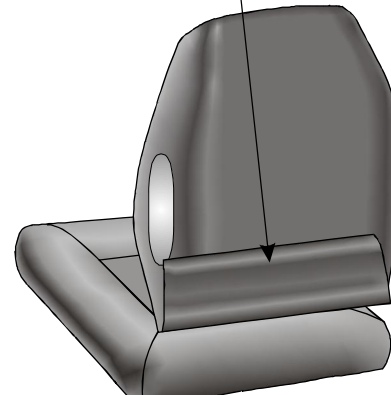

NOTE: ALL DRIVERS SIDE SEAT COVERS CONTAIN A WET OKOLE TAG SEWN ON THE OUTBOARD SIDE FACING THE DOOR OF BOTH THE BACK REST AND SEAT BOTTOM COVERS.

Step 2

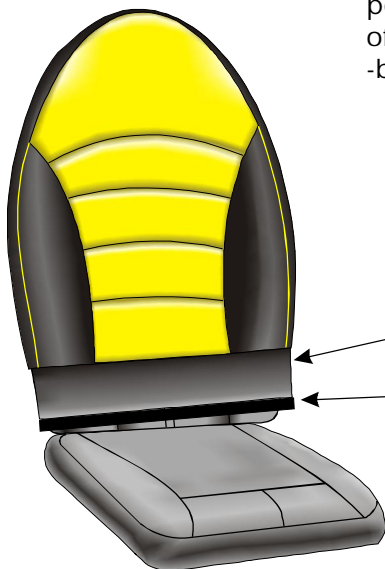


Step 2A

Pull portion "A" down over the back rest evenly taking care not to pull to hard. Push portion "A" through bottom of back-rest (between seat-bottom and backrest gap.)

Step 2B

Next, fold the backrest forward and from behind the seat attach velcro from portion "A" and "B" together while holding change catcher skirt against the back of the backrest..

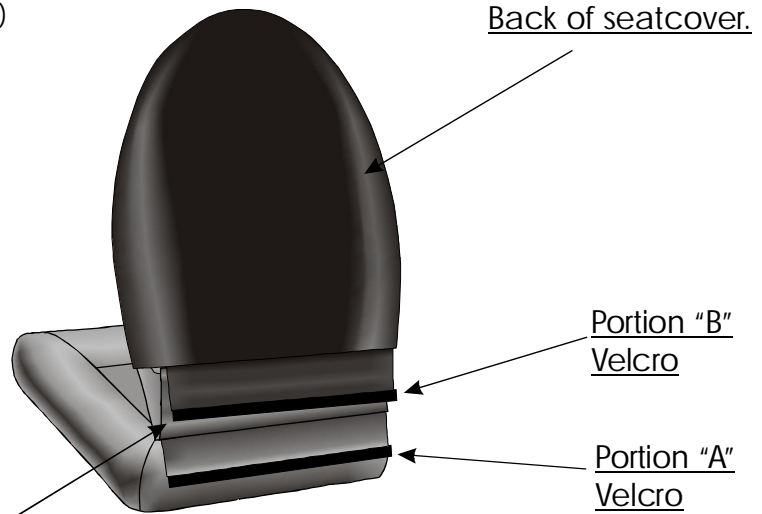

Change Catcher folded up against backrest.

INSTALLATION QUESTIONS

TECHNICAL ASSISTANT HOT-LINE CALL TOLL FREE 1(888) 24-OKOLE
MONDAY-SATURDAY 8:00 A.M.-4:30 P.M. PACIFIC TIME.