



INSTRUCTION (T) 1991-1995 Acura Legend

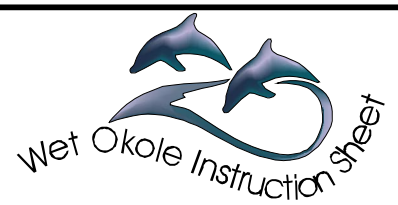

Dear Customer,



As we are unable to assist you on installing your Wet Okole Hi. Waterproof sport seat covers we offer these special instructions. This particular instruction is a universal instruction for Acura Legend rear bench. Mostly all other vehicles are self explanatory. Any problems please feel free to call for technical support at 1(888)24-Okole. Enjoy your Wet Okole Hawaii Seat Covers!

You will need to remove the bottom seat cushion first and the rest second prior to seatcover installation..
(Refer to illustration)

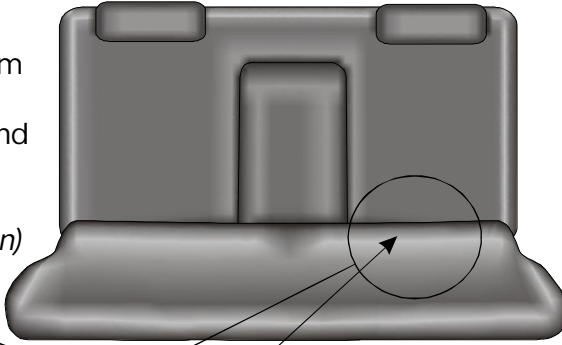

Step 1B

After the 10MM anchor bolt is removed fold the seat cushion forward.

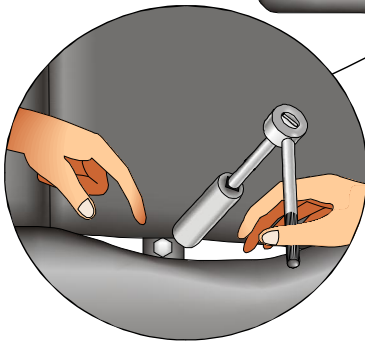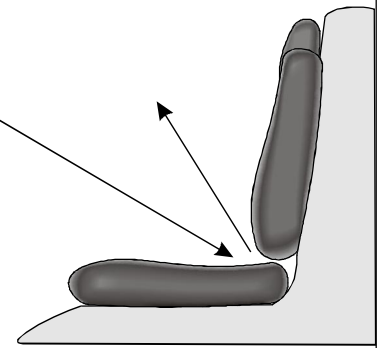


Step 1A

First remove the 10MM anchor bolt located between the seat and rest cushions with a 10MM socket and extension.

Step 1C



Next, once seat is folded all the way forward the front of the seat can be unlatched.

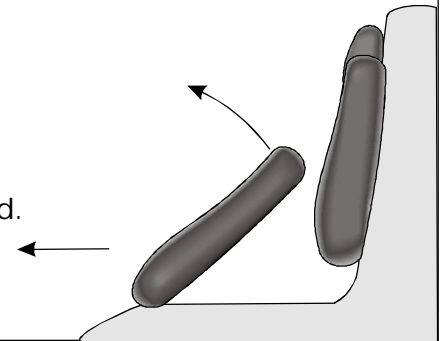

Step 2

Next, remove the 6 10MM bolts. Four are located at the base of the rest and two are located behind both headrest.
(Refer to illustration)

Note:
Access to armrest will be lost.

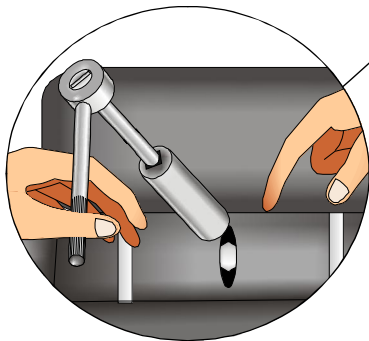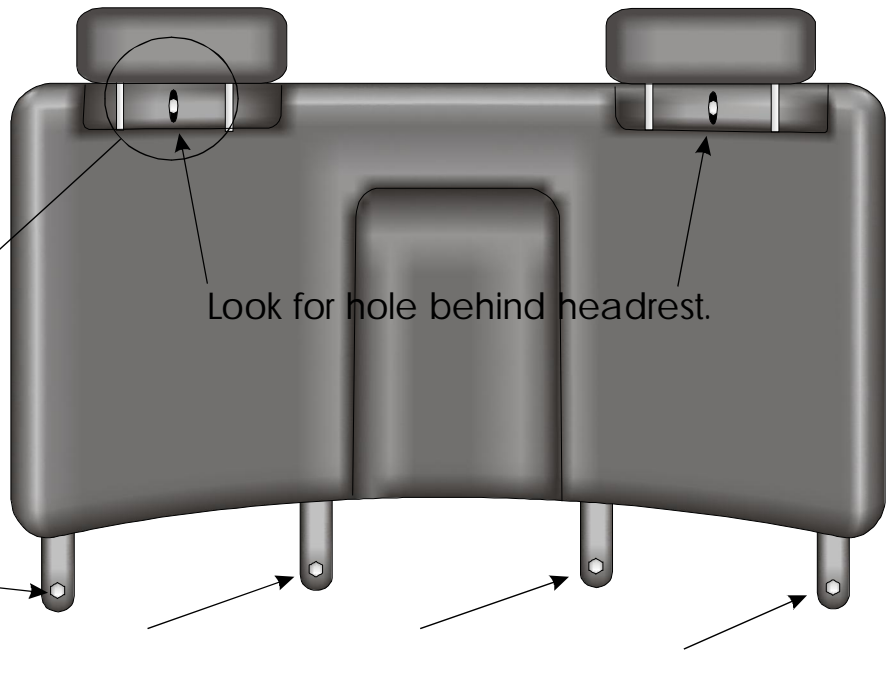

INSTALLATION QUESTIONS

TECHNICAL ASSISTANT HOT-LINE CALL TOLL FREE 1(888) 24-OKOLE
MONDAY-SATURDAY 8:00 A.M.-4:30 P.M. PACIFIC TIME.