



# INSTRUCTION SHEET (X)

## 1998-Current Corvette



Dear Customer,

As we are unable to assist you on installing your Wet Okole Hi. Waterproof sport seat covers we offer these special instructions. This particular instruction is a universal instruction for the 98-current Chevrolet Corvette. Mostly all other vehicles are self explanatory. Any problems please feel free to call for technical support at 1(888)24-Okole. Enjoy your Wet Okole Hawaii Seat Covers!

### Step 1

Install side strap by inserting it between the seat and electrical hardware. (It may be necessary to remove the buckles from the strap first.)



### Step 2

After completing Step 1 line up seams of your Wet Okole seatcover with those of your factory seats. Next, tuck neoprene seatcover under plastic.



Tuck neoprene under plastic.


### Step 3

Pull portion "A" down over the back rest evenly taking care not to pull too hard. Push portion "A" through bottom of back-rest (between seat-bottom and backrest gap).



### Step 4

After you have completed step 3 fold the backrest forward and from behind the seat attach velcro from portion "A" and "B" together.

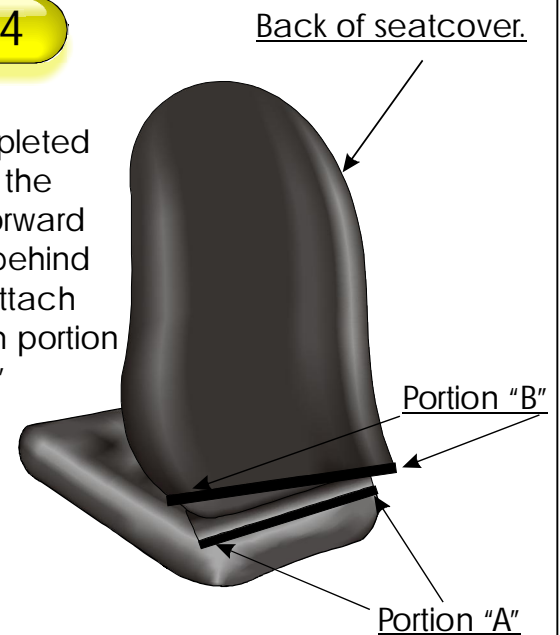

## INSTALLATION QUESTIONS

TECHNICAL ASSISTANT HOT-LINE CALL TOLL FREE 1(888) 24-OKOLE  
MONDAY-SATURDAY 8:00 A.M.-4:30 P.M. PACIFIC TIME.