




Universal Armrest Installation Instruction (E)

Installation Instruction

Seat Cover Rest

Hole in inboard side of each rest cover.

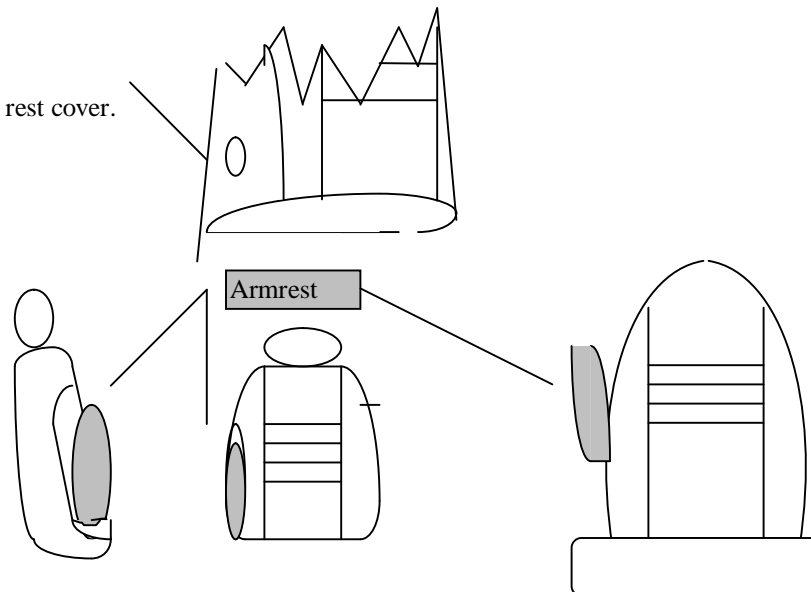

Dear Customer

As we are unable to assist you in installing your Wet Okole Hi. water proof sport seat cover we offer these special instructions for each individual vehicle. On your particular car or truck the front rest part of the seat cover, shown at the very top, has a hole cut on the inboard side of each cover. If equipped with Headrests Remove the Headrest, using the Universal Headrest removal instruction F. Slide the rest seat cover over the rest part of the seat until the armrest is at the hole. Bring the armrest through the hole while sliding the seat cover down the entire rest of the seat rest. The hole is positioned at the pivot point of the armrest. Everything else is pretty self explanatory. Any problems please feel free to call for technical support. Enjoy your Wet Okole Hawaii Seat Covers!

INSTALLATION QUESTIONS
TECHNICAL ASSISTANT **HOT-LINE** 1-888-24-OKOLE